

# **BORGESON**

***Steering You Forward***

## #800335 Ford 292/312 Y-Block P/S Pump Kit

### **KIT CONTENTS:**

**P/S Pump, P/S Pulley, P/S Pump Bracket, Hardware**


**Your Ford Saginaw P/S pump upgrade comes with the pump attached to the pump bracket and the pulley already properly installed. Please leave these items assembled for installation.**

### **Installation:**

Attach the bracket to the water pump with one existing bolt and the stud provided.

We ship this kit with two nuts so you can install the tapered stud into the water pump without damaging the threads. It only needs to be installed with one nut after the stud is installed into the water pump. The other smaller hole in the bracket corresponds with the existing bolt in the face of the water pump.

**NOTE:** This pump kit will not be sealed and leak free until it is adjusted and tightened into final position. The force of the bracket against the reservoir is required to properly seal.

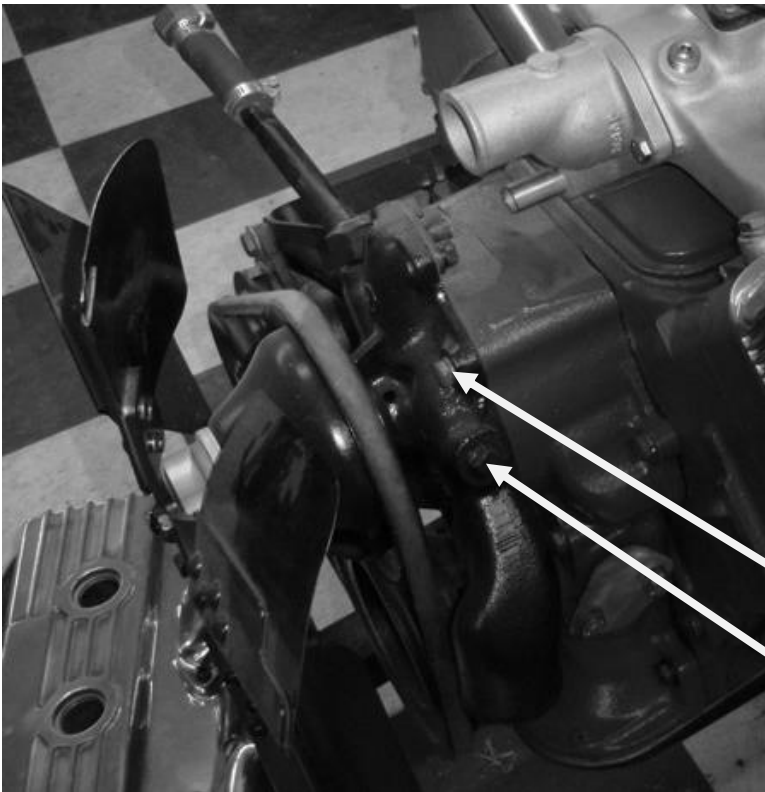

Borgeson Universal Co., Inc.  
9 Krieger Dr. Travelers Rest, SC 29690  
[www.borgeson.com](http://www.borgeson.com)